MMF POS Cash Drawer Installation

Last Modified on 10/22/2022 9:50 am CDT

The following installation instructions have been made available for districts who use MMF[™] POS cash drawers with a USB connection.

These instructions are only for MMF[™] POS cash drawers that do **NOT** have a Dip Switch.

Step	Description	Notes
1	Disconnect the USB powered cash drawer.	N/A
2	Use the Install Terminal option on the Terminals tool in Campus to download and install the POS terminal software. After the POS terminal software is installed and the terminal has rebooted, click the Campus Point of Sale shortcut, log into the POS application with the Admin PIN, and load POS data. If you previously installed the Campus POS application on your terminal, you still need to complete this Install Terminal process again in order to download the appropriate cash drawer drivers. Never uninstall the Campus POS application without first contacting Support	See the article Terminal Installation and Configuration for complete instructions. PATH: Point of Sale > Administration > Terminals



Step	Description	Notes
3	Set Point of Sale Options. When setting Point of Sale Options, select MMF2017 in the Cash Drawer dropdown list.	See the article Terminal Installation and Configuration for complete instructions.
4	Navigate to C:\POSClient\installer\mmf and run the driverInstall.exe file as the administrator. Name Vipe Size Pictorion Size driveInstall.exe Application Size KB DriveInstall.ini Configuration sett 1 KB DriveInstall.ini Configuration sett 1 KB mmfopen.exe Application Size 1 KB ReadMetat Text Document 1 KB VISBCRDLL Application extens 30 KB	If the following Windows Security message displays, click Install this driver software anyway.
5	Restart the terminal if you are installing a new cash drawer or are reimaging your terminal.	N/A



Step	Description	Notes
6	Open the Start menu and locate the Device Manager utility.	Depending on your operating system, you may need to get to Device Manager by Control Panel > System > Hardware > Device Manger or by selecting the Start Menu in your task bar and typing Device Manager into the <i>Search</i> <i>programs and files</i> field.
7	Plug in the USB cash drawer and wait for the Device Manager to recognize the device.	N/A
8	Double-click USB Cash Drawer . The USB Cash Drawer Properties dialog displays.	N/A





